

Aerial 40 and 55 Chandelier

700ARL40, 700ARL55 1.0



CAUTION - RISK OF FIRE
 This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.
 Use minimum 90°c supply conductors.

Two Person Installation Recommended

GENERAL PRODUCT INFORMATION:

This product is suitable for damp locations.

These fixtures are intended to be installed utilizing NEC compliant junction boxes.

This product can be dimmed with most ELV or TRIAC dimmers.


This instruction shows a typical installation.



7400 Linder Ave, Skokie, IL 60077
 847.410.4400

www.techlighting.com


© 2019 Tech Lighting, L.L.C. All rights reserved. The "Tech Lighting" graphic is a registered trademark of Tech Lighting, L.L.C. Tech Lighting reserves the right to change specifications for product improvements without notification.
 A Generation Brands Company

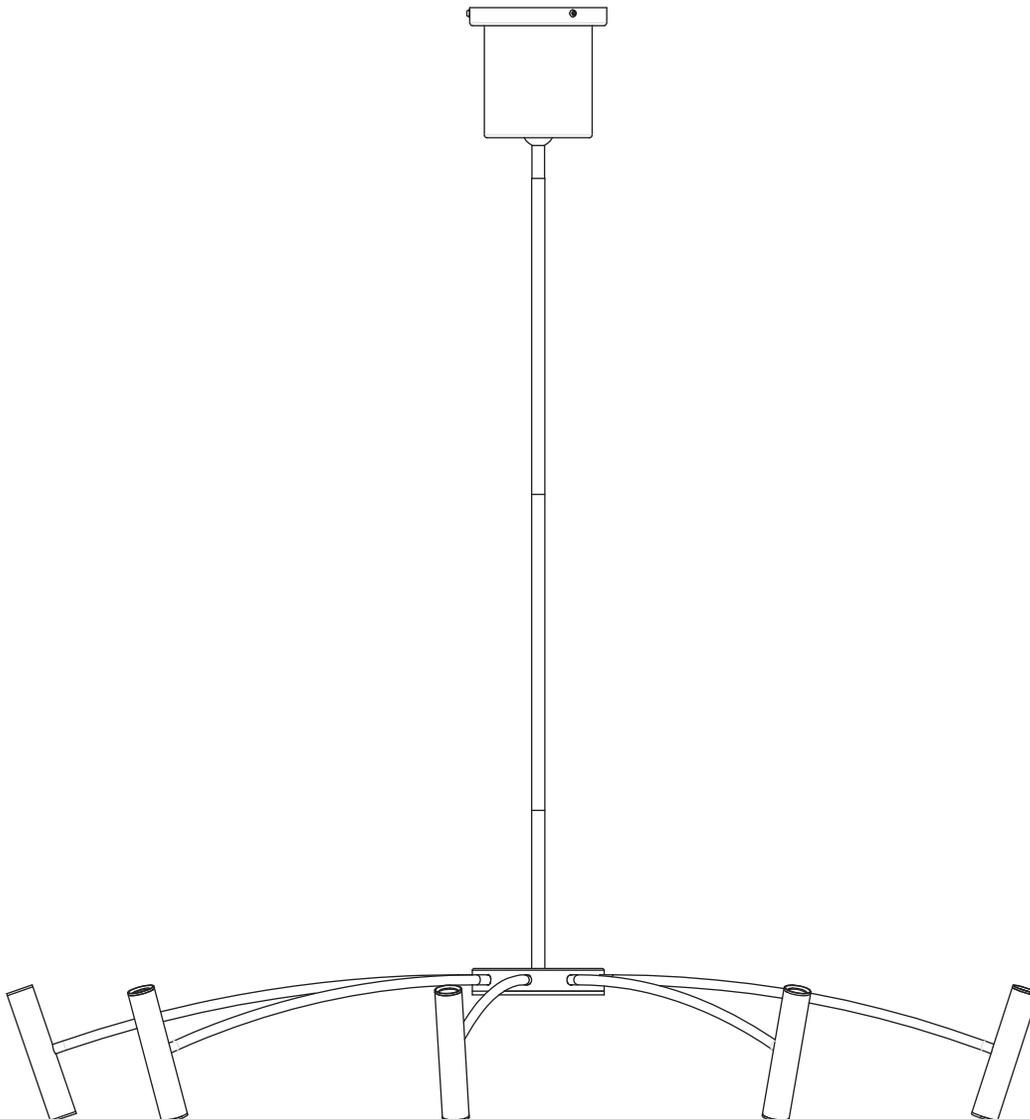

SAVE THESE INSTRUCTIONS!

Install the Fixture

1A

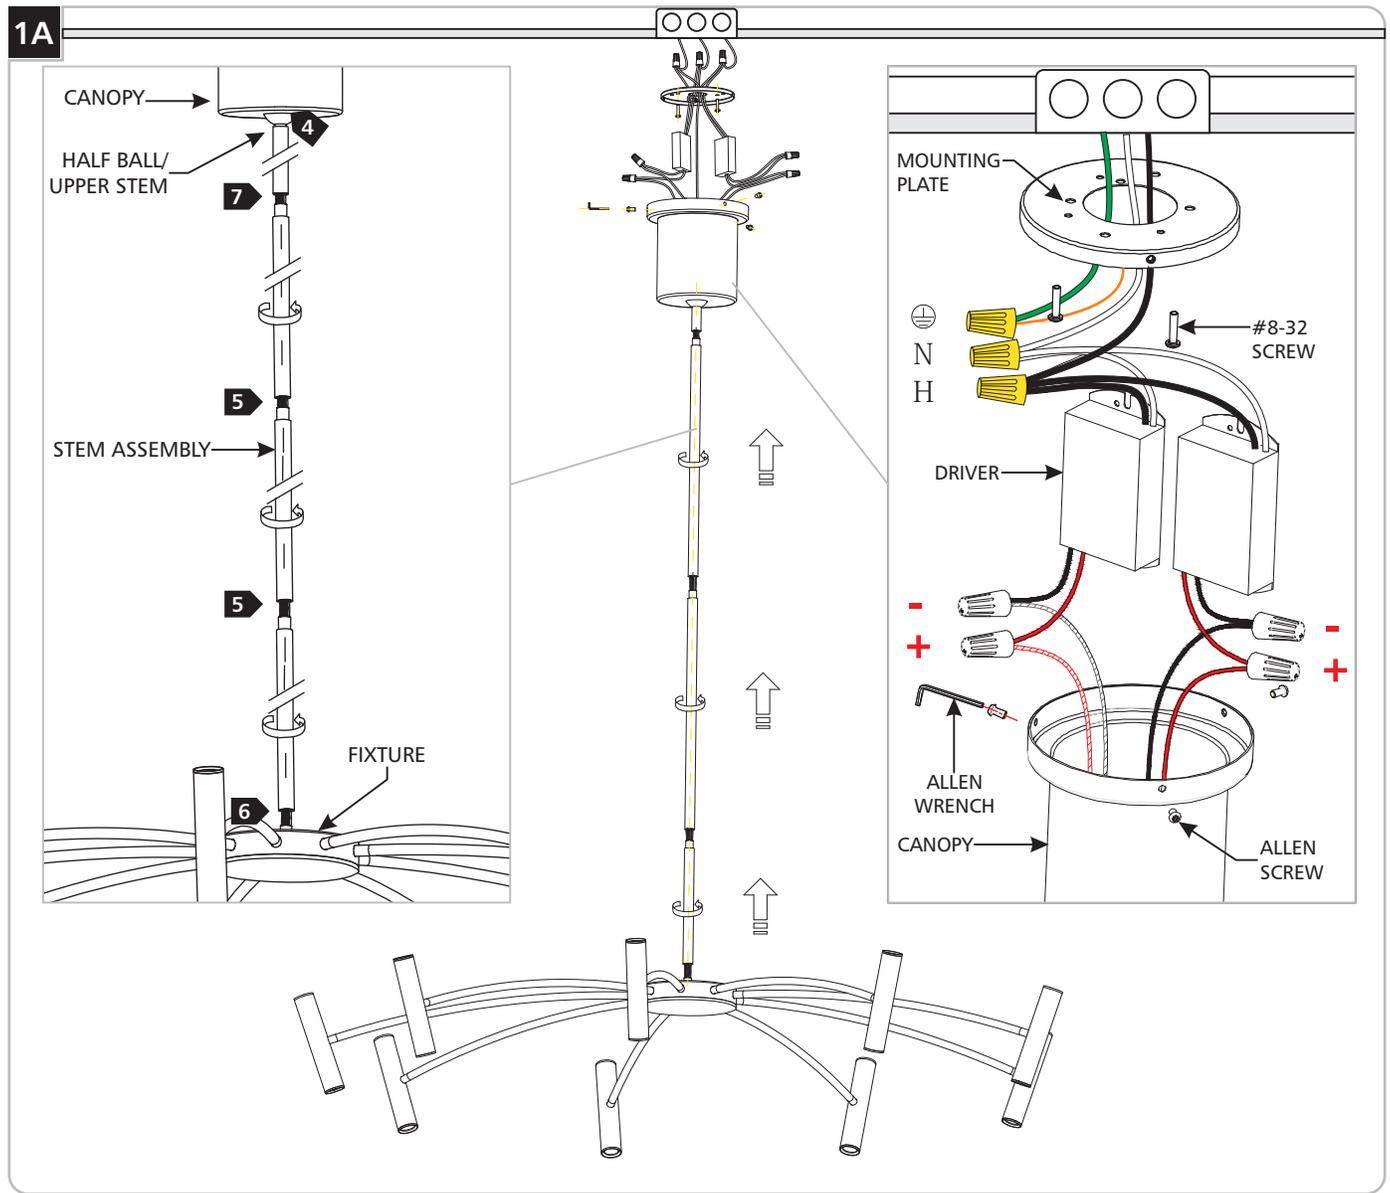

- 1 Remove all the canopy screws using the provided Allen Wrench.
- 2 Remove the mounting plate and drivers from the canopy.
- 3 Secure the mounting plate to the electrical box with the #8-32 screws provided.
- 4 Feed the half ball/upper stem assembly through the top of the canopy.
- 5 Determine the desired height of the fixture using the provided stems and assemble them by screwing them together.
- 6 Feed the fixture wires through the stem assembly, then screw the stem assembly to the top of the fixture.
- 7 Feed the fixture wires through the stem and half ball assemblies, then screw the half ball/upper stem assembly to the stem assembly.
- 8 Connect black wire of driver 1 to solid black fixture wire and the black wire of driver 2 to striped black fixture wire with a wire nut.
- 9 Connect red wire of driver 1 to a solid red fixture wire and red wire of driver 2 to a striped red fixture wire with a wire nut.
- 10 Connect the fixture to a suitable ground in accordance with local electrical codes.
- 11 Connect the white driver wires to the neutral power line wire with a wire nut.
- 12 Connect the black driver wires to the hot power line wire with a wire nut.
- 13 **For 277V Only:** If using 0-10V dimming, connect the purple and gray wires to a compatible dimmer. If not using 0-10V dimming, cap off the purple and gray wires.
- 14 Neatly place the drivers, all wires, and wire nut connections inside the canopy, align the canopy holes with the mounting plate holes, and secure the canopy in place by tightening the Allen screws using the provided Allen Wrench.