

1" Rigid Standoff





GENERAL PRODUCT INFORMATION:




This product is suitable for dry locations only.

This product must be used with Tech Lighting and LBL Lighting MonoRail systems only.


Use the MonoRail rigid standoff every three feet and over the MonoRail join connectors.

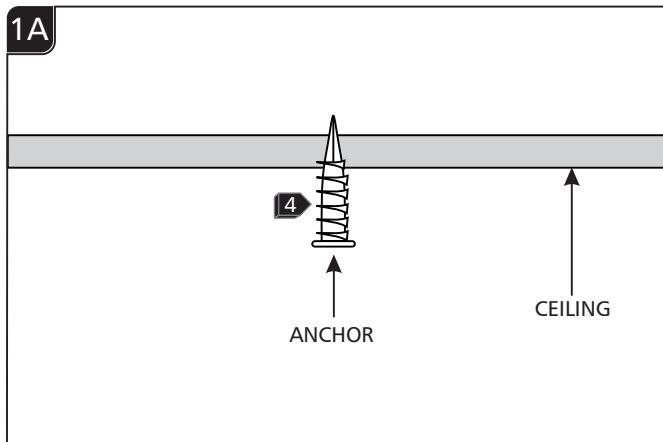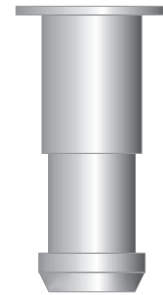


- 1** Select a location on the ceiling where the MonoRail is to be mounted.
- 2** One way of marking the standoff locations on the ceiling is to lay the MonoRail on the floor underneath of the selected location and by using a plumb bob pointing on the center of Monorail mark the points on the ceiling.
- 3** The other way is to hold the MonoRail directly against the ceiling and mark the standoff points on the ceiling.
- 4** Tap the anchors at the marked points up to the threaded portion with a hammer.

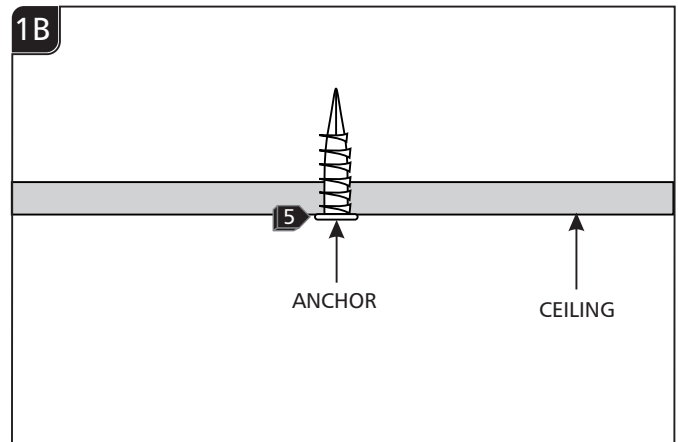

- 5** Screw the anchors in the rest of the way with a Phillips screwdriver.

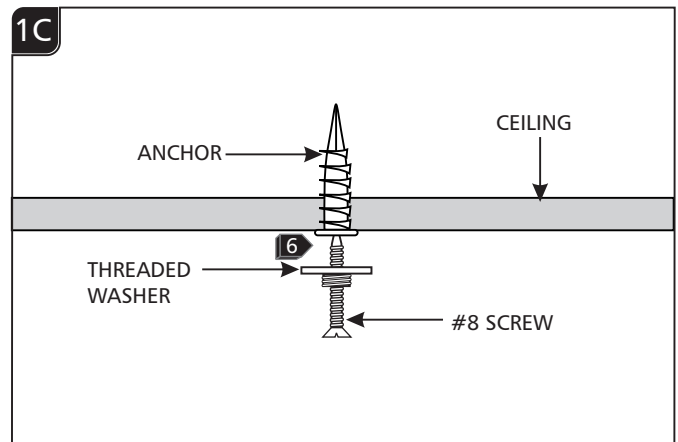


- 6** Attach the threaded washer to the anchor with the #8 screw.

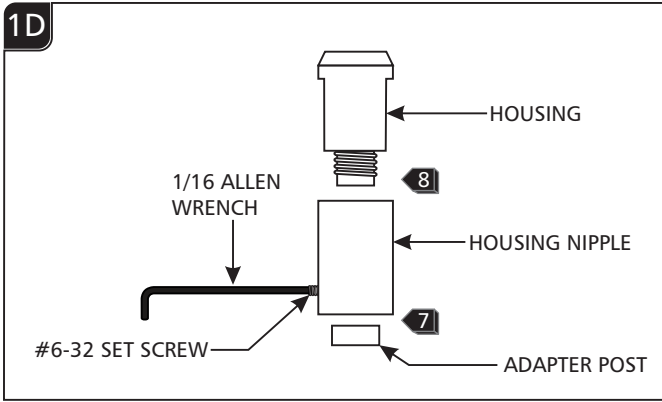


7 Loosen the #6-32 set screw with the 1/16 Allen wrench and remove the adapter post from the bottom of the housing nipple.

8 Unscrew the housing from the housing nipple.

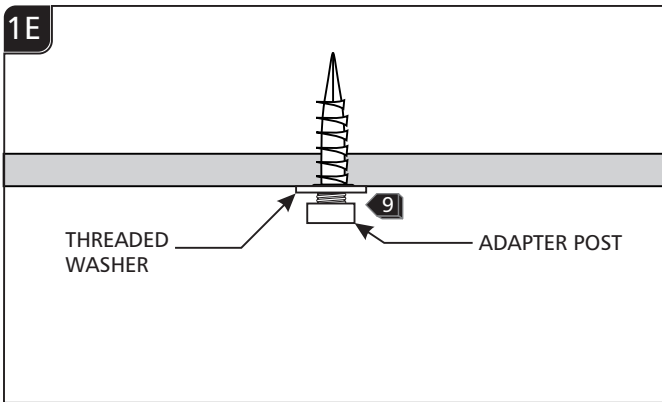


9 Screw the adapter post completely to the threaded washer.

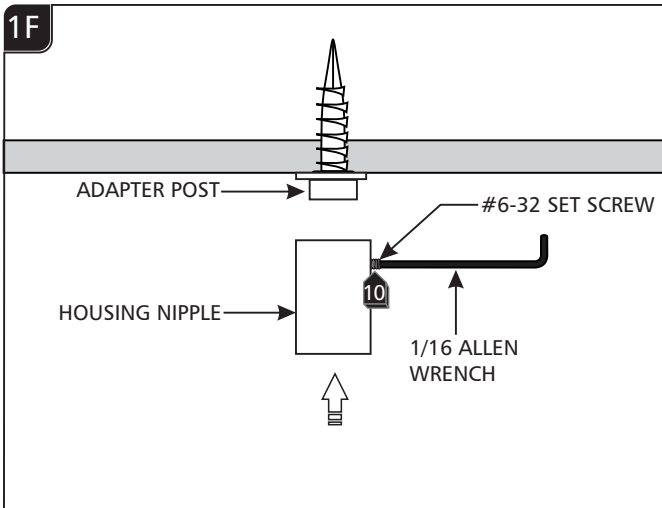

10 Push the housing nipple all the way up onto the adapter post and tighten the #6-32 set screw snugly with the 1/16 Allen wrench.

11 Repeat steps 6 through 10 for the remaining standoffs.

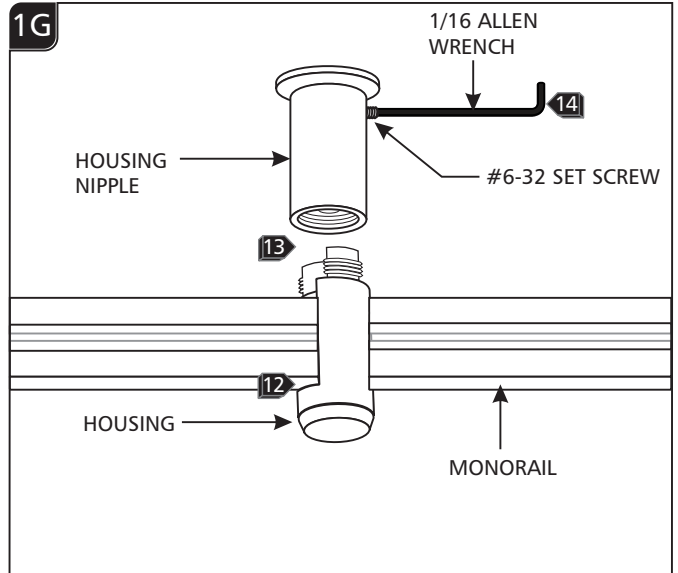

12 Place the MonoRail into the housing.

13 Loosen the #6-32 set screw on the housing nipple so that it can turn easily and screw the housing nipple to the housing tight.

14 Tighten the #6-32 set screw with the 1/16 Allen wrench.

SAVE THESE INSTRUCTIONS!

TECH LIGHTING®

7400 Linder Ave, Skokie, IL 60077

847.410.4400

www.techlighting.com

© 2020 Tech Lighting, L.L.C. All rights reserved.

Visual Comfort & Co.