

Belterra 38, 43 and 48 Chandelier



CHANDELIER

GENERAL PRODUCT INFORMATION:

These fixtures are intended to be installed utilizing NEC compliant junction boxes.

This product is suitable for damp locations.

Dimmable with most ELV or TRIAC dimmers.

This instruction shows a typical installation.




CAUTION - RISK OF FIRE

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

Use minimum 90°C supply conductors.


SAVE THESE INSTRUCTIONS!

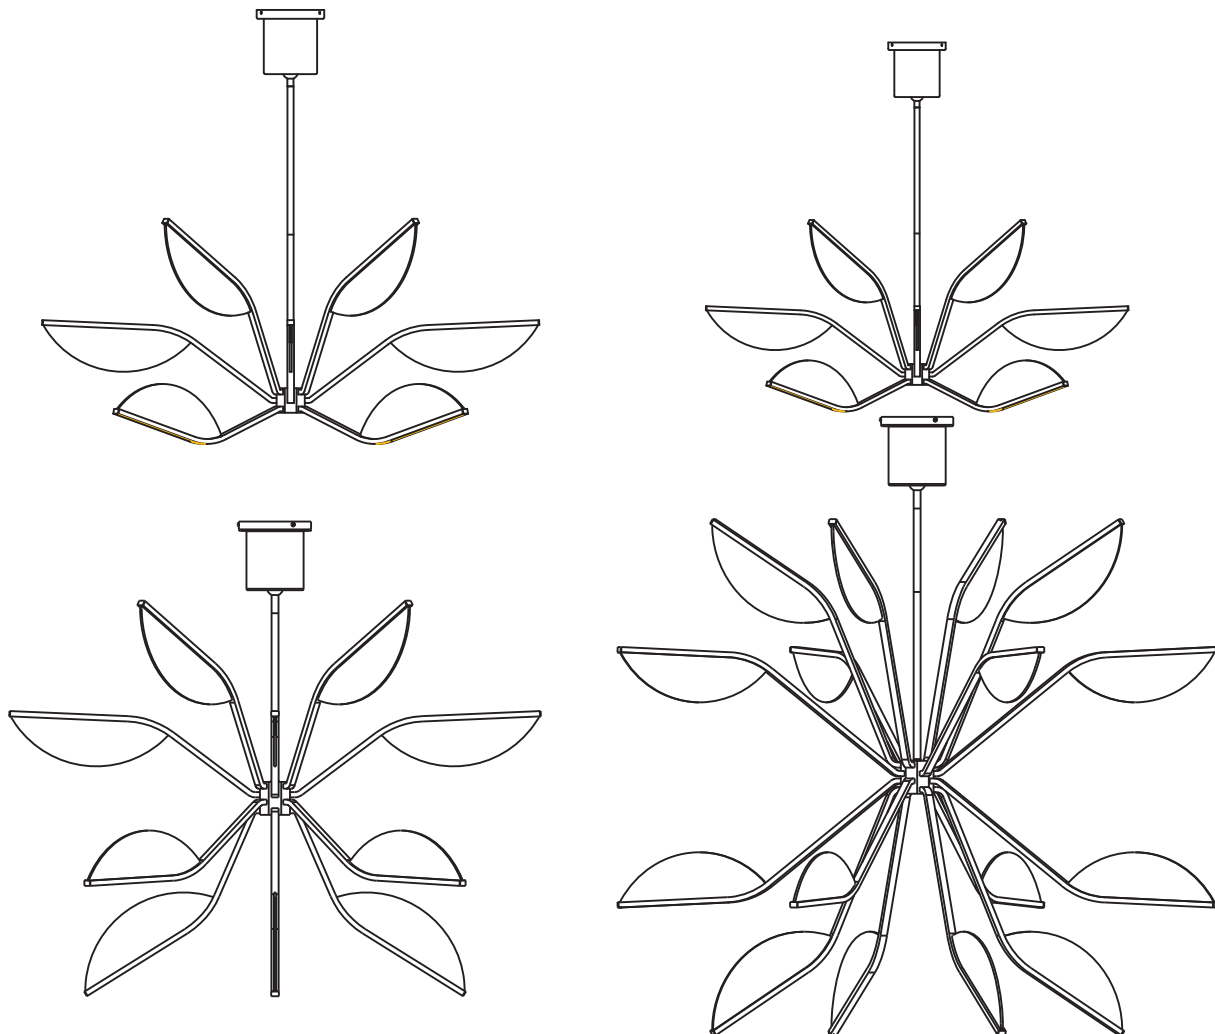

7400 Linder Ave., Skokie, IL 60077
T 847.410.4400 | F 847.410.4500
www.techlighting.com

Install the Fixture

1A

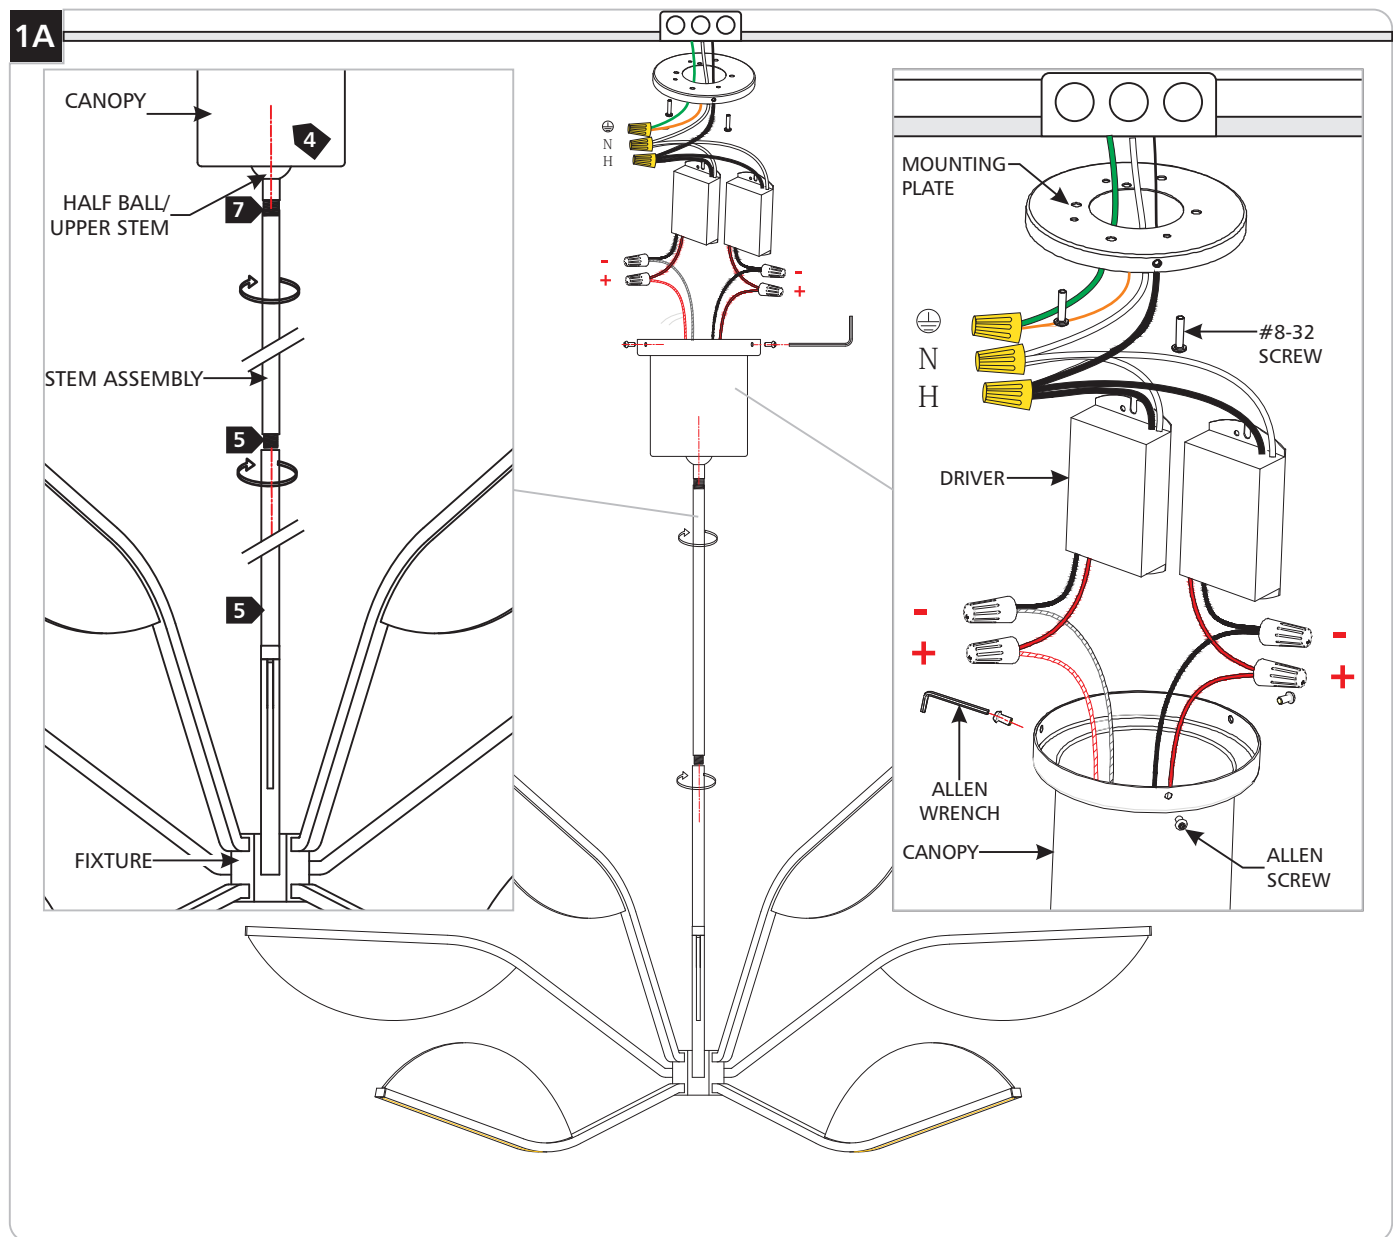

- 1 Remove all the Allen screws using the provided Allen Wrench.
- 2 Remove the mounting plate and drivers from the canopy.
- 3 Secure the mounting plate to the electrical box with the #8-32 screws.
- 4 Feed the half ball/upper stem assembly through the top of the canopy.
- 5 Determine the desired height of the fixture using the provided stems and assemble them by screwing them together.
- 6 Feed the fixture wires through the stem assembly, then screw the stem assembly to the top of the fixture.
- 7 Feed the fixture wires through the half ball/upper stem assembly and canopy, then screw the half ball/upper stem assembly onto the stem assembly.
- 8 Connect black wire of driver 1 to solid black fixture wire and the black wire of driver 2 to striped black fixture wire with a wire nut.
- 9 Connect red wire of driver 1 to a solid red fixture wire and red wire of driver 2 to a striped red fixture wire with a wire nut.
- 10 Connect the fixture to a suitable ground in accordance with local electrical codes.
- 11 Connect the white driver wires to the neutral power line wire with a wire nut.
- 12 Connect the black driver wires to the hot power line wire with a wire nut.
- 13 **For 277V Only:** If using 0-10V dimming, connect the purple and gray/pink wires to a compatible dimmer. If not using 0-10V dimming, cap off the wires.
- 14 Neatly place the drivers, all wires, and wire nut connections inside the canopy, align the canopy holes with the mounting plate holes, and secure the canopy in place by tightening the Allen screws using the provided Allen Wrench.