

Shallow Canopy Kit

700SHLCNPY_ 1.0

TECH LIGHTING® CEILING

GENERAL PRODUCT INFORMATION: 


This product is suitable for indoor locations.

This product can be dimmed with a standard electronic dimmer.


This instruction shows a typical installation.

SAVE THESE INSTRUCTIONS!


CAUTION - RISK OF FIRE
This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.
Use minimum 90°C supply conductors.

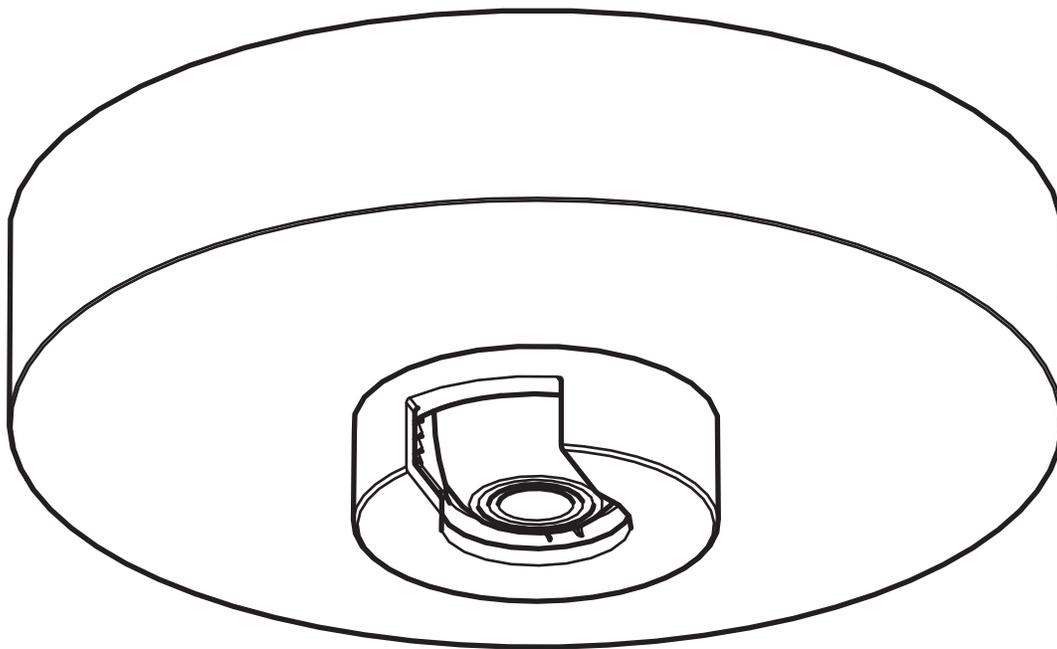


Prepare for Install

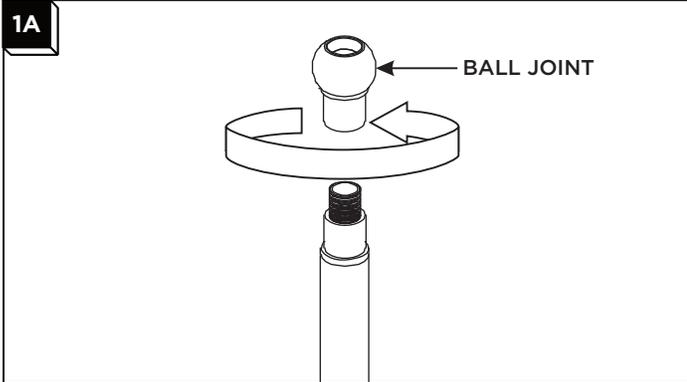


- 1** If necessary remove the existing canopy joint from the stem.

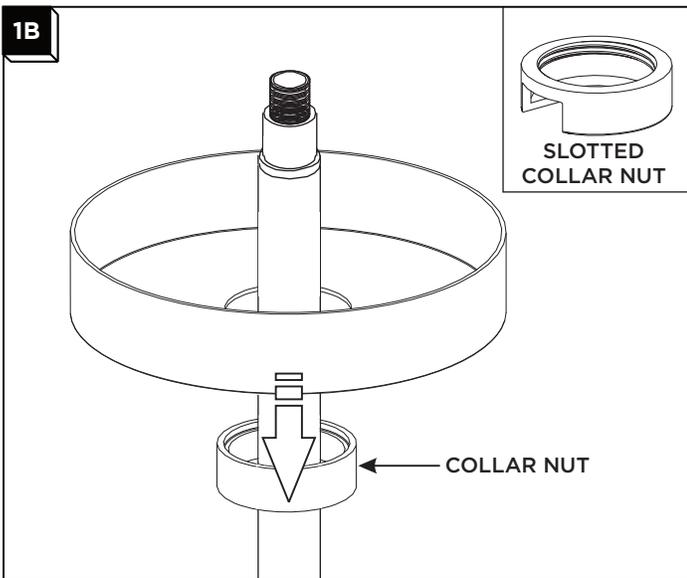

- 2** Feed the stem through first the collar nut and then the canopy housing. Use the slotted collar nut if installing on a sloped ceiling (up to 45°)

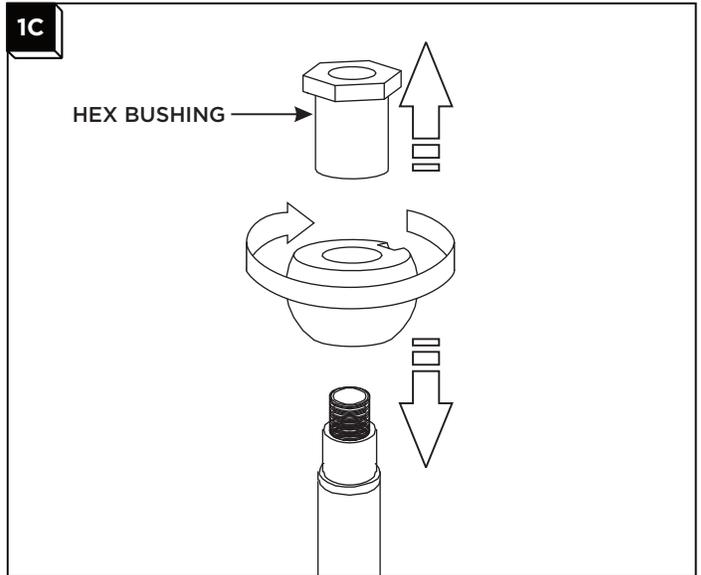

- 3** Thread the ball onto the nipple on the top of the stem. The hex bushing adapter can be removed in order to change thread sizes between 1/8IPS and 1/4IPS (depending on stem size).

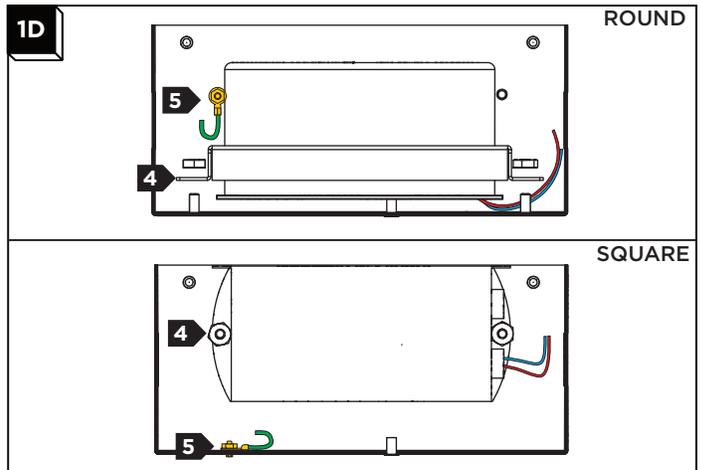

- 4** Remove the fixture driver from the original canopy and mount it into the remote box.

For Round Drivers - Use the mounting bracket secured with hex nuts as shown.


For Square Drivers - mount to either side of the remote box with hex nuts.

- 5** Install the ground wire with the provided screw and nut to mount the ring terminal on one of the holes in the housing depending on the type of driver.



For Round Drivers - Attach the ground wire to one of the four side holes.

For Square Drivers - Attach the ground to one of the four bottom holes.

NOTE: Check the label on the driver to confirm correct input voltage.


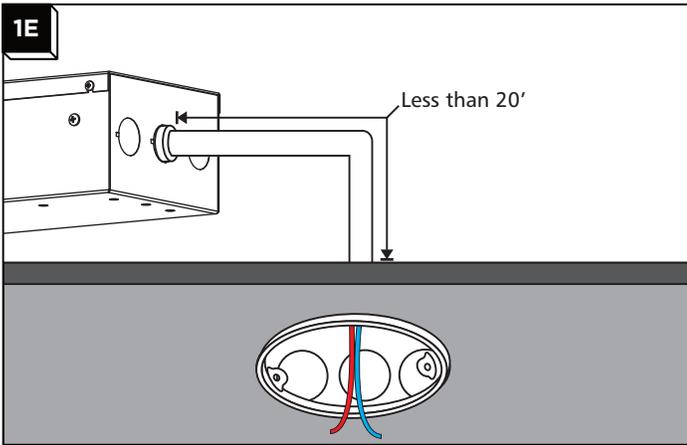


6 Feed wires through conduit to remote driver location. Ideally, no farther than 20' from the fixture.

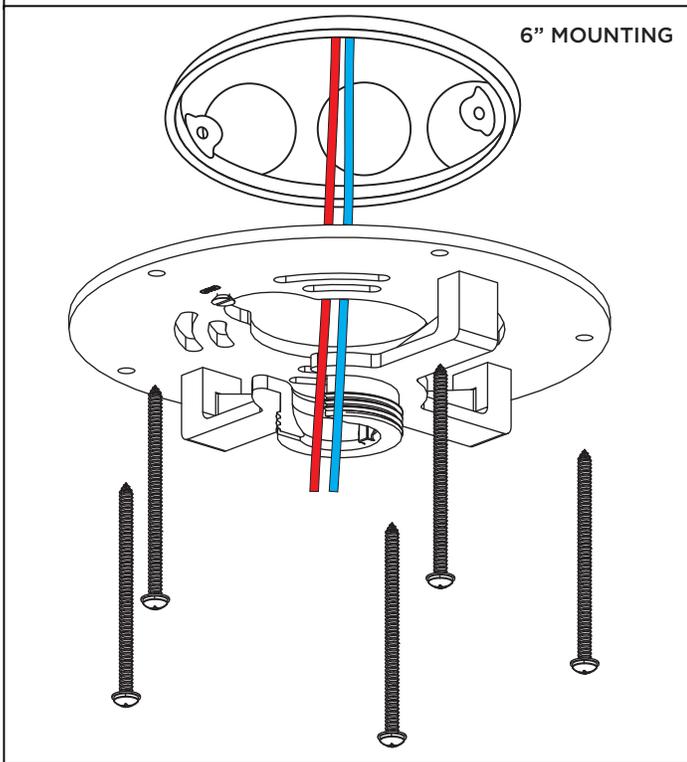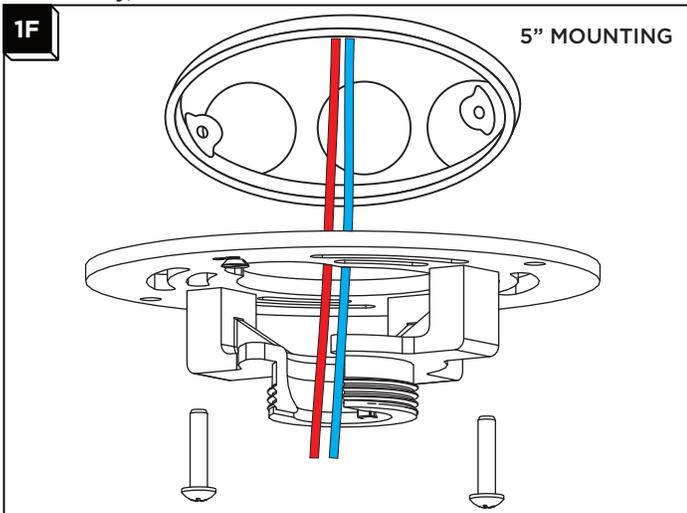


7 For the 5": Screw the mounting plate to a standard j-box with the supplied screws.

8 For the 6": Use the provided wood screws to mount directly to the ceiling

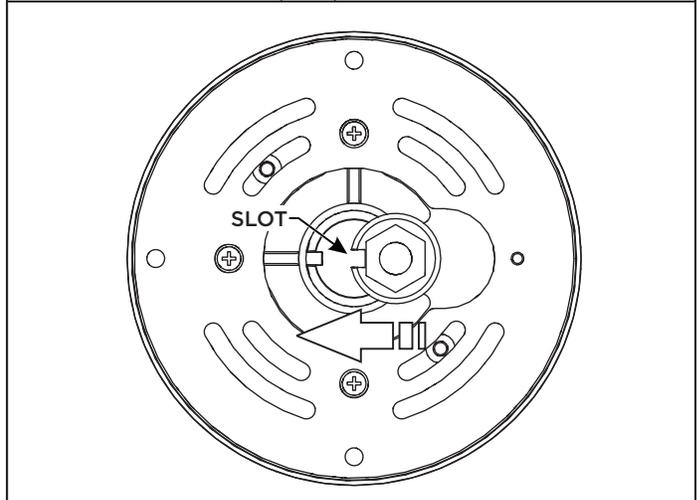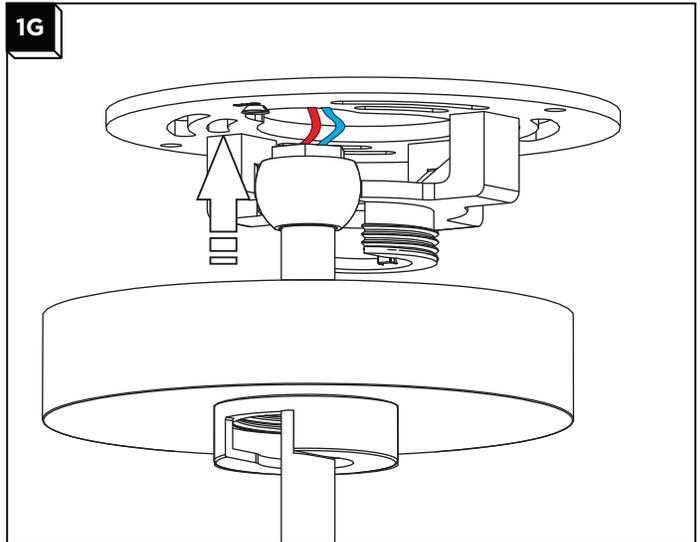

9 Lift the fixture straight up, so that the ball rests in the cradle. Note: orientation needs to be aligned with the slot on the ball. Ensure any wire slack is kept above the screw collar, so that wires do not pinch.

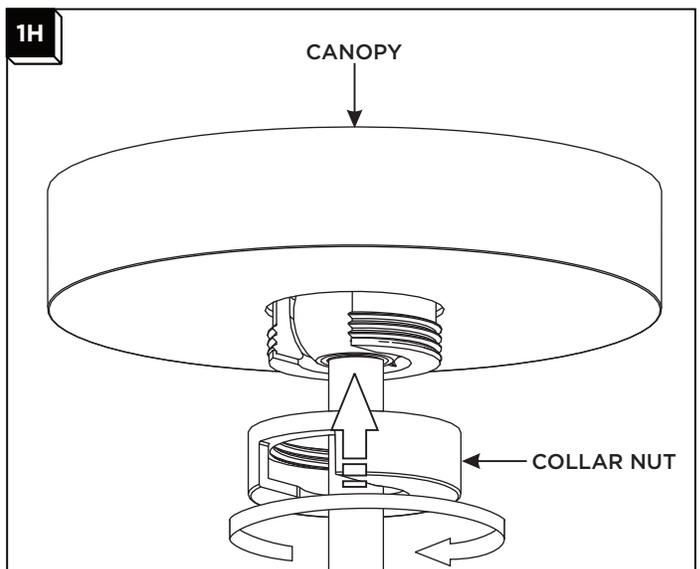

10 Raise the canopy up until it touches the ceiling, and then tighten it down with the collar nut. For the slotted nut, turn until the slot aligns with the slot in the screw collar's cradle.



7400 Linder Ave., Skokie, IL 60077

T 847.410.4400 | F 847.410.4500

www.techlighting.com