

Splice Box

1.0



GENERAL PRODUCT INFORMATION:



This product is suitable for damp locations.


This instruction shows a typical installation.

CAUTION - RISK OF FIRE

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

Use minimum 90°C supply conductors.

SAVE THESE INSTRUCTIONS!

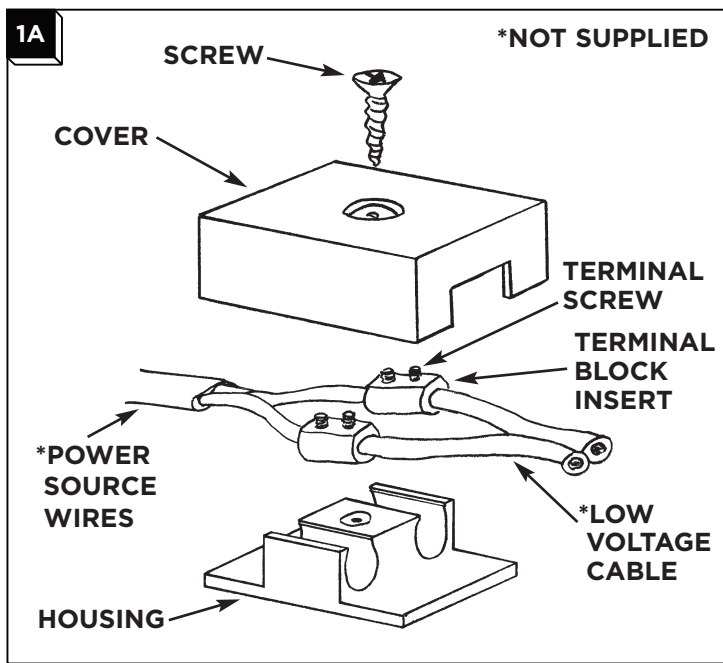

- 1** Strip 1/4" from end of power source wires (not supplied).
- 2** Split about 3/4" and strip 1/4" from end of the low-voltage cable (not supplied).
- 3** Remove terminal block inserts from housing (if applicable).
- 4** Place striped ends of wires into the terminal block inserts, making sure all bare wires are inside and tighten with screws.
- 5** Snap terminal block inserts with attached wires into the housing.
- 6** Place the cover over the housing and secure the splice box to the surface with the long wood screw. For harder surfaces, use the short screw to attach the cover to the housing, then secure the splice box to the surface with 2-sided tape.

Warning: Use of other manufactures components will void warranty, listing and create a potential safety hazard.



7400 Linder Ave., Skokie, IL 60077
 T 847.410.4400 | F 847.410.4500
www.techlighting.com