

Joni Pendant

700TDJNI

1.0



GENERAL PRODUCT INFORMATION:

This product is suitable for damp locations.

These fixtures are intended to be installed utilizing NEC compliant junction boxes.

This product can be dimmed with most ELV or TRIAC dimmers.

This instruction shows a typical installation.




CAUTION - RISK OF FIRE
This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.
Use minimum 90°c supply conductors.


Two Person Installation Recommended



© 2019 Tech Lighting, L.L.C. All rights reserved. The "Tech Lighting" graphic is a registered trademark of Tech Lighting, L.L.C. Tech Lighting reserves the right to change specifications for product improvements without notification.
A Generation Brands Company

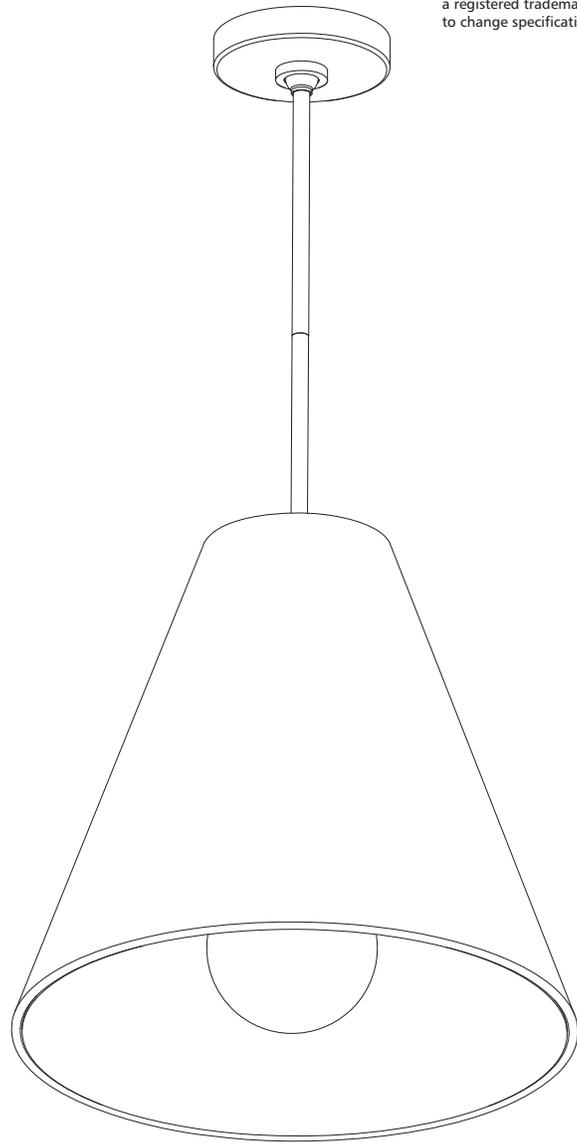

SAVE THESE INSTRUCTIONS!

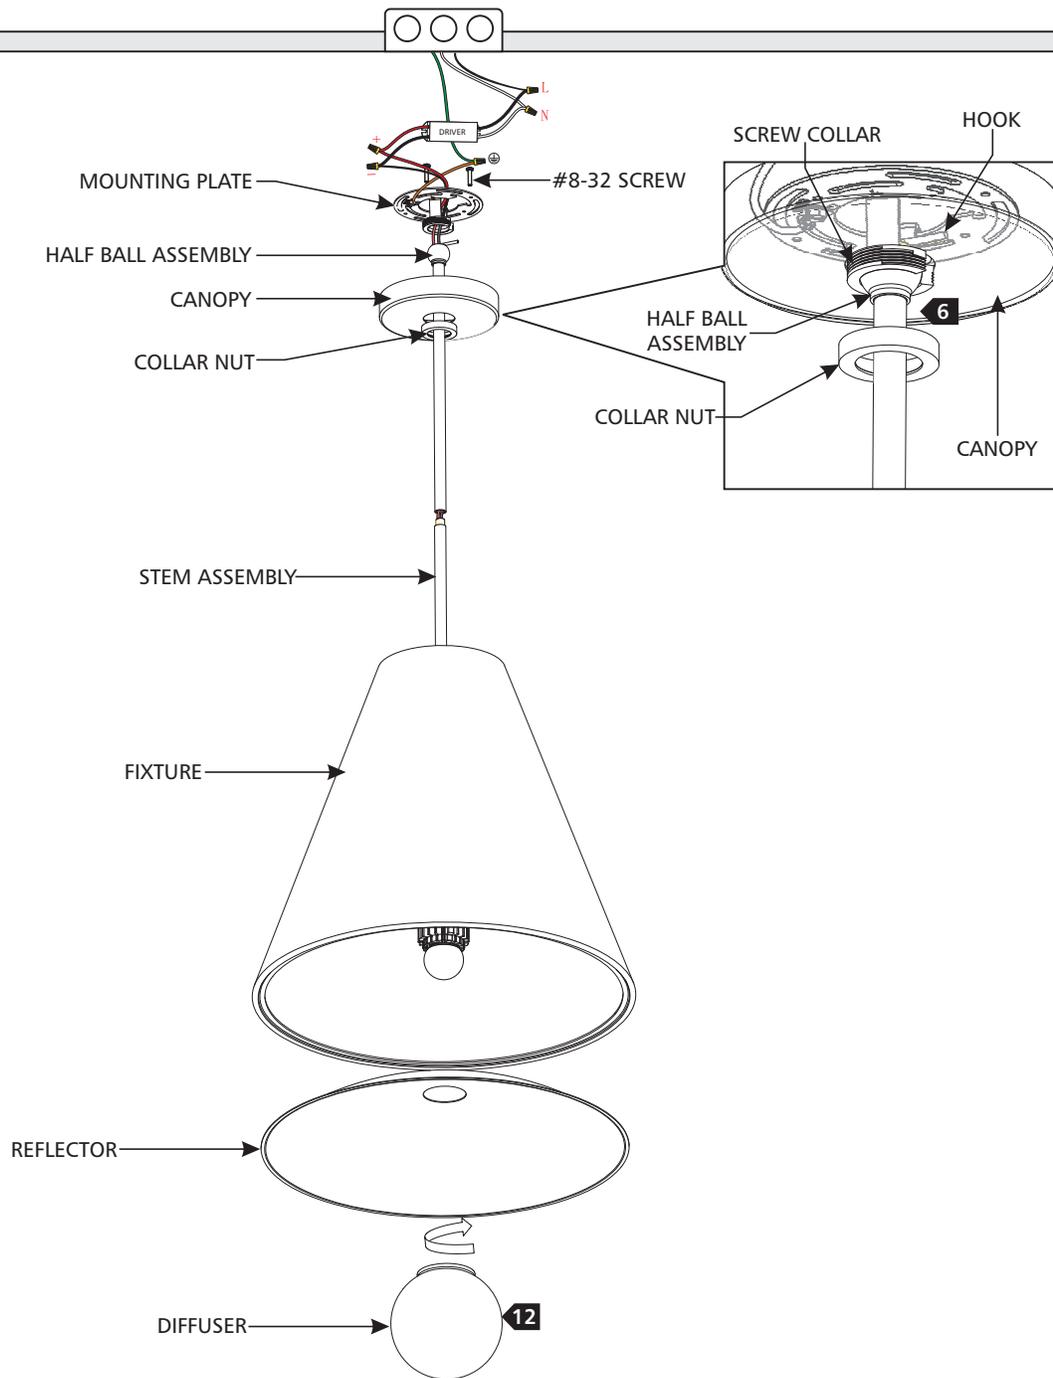

- 1 Determine the wanted height or look of the fixture with the provided stems, then assemble them by screwing them together.
- 2 Feed the fixture wires through the stem assembly, then screw the stem assembly to the top of the fixture.
- 3 Feed the fixture wires through collar nut, canopy and the half ball assembly, then screw the half ball assembly onto the stem assembly.
- 4 Connect the black driver wire to the black fixture wire with a wire nut, then connect the red driver wire to the red fixture wire with a wire nut. Place the driver inside the junction box.
- 5 Align and secure the mounting plate to the junction box, then gently pull the white and black driver wires out of the junction box and mounting plate.
- 6 Slide the half ball assembly through the screw collar and rotate it clockwise to lock in place.
- 7 Connect the fixture to a suitable ground in accordance to local electrical codes.
- 8 Connect the white driver wire to the neutral power line wire with a wire nut.
- 9 Connect the black driver wire to the hot power line wire with a wire nut.
- 10 **For 277V Only:** If using 0-10V dimming, connect the purple and gray wires to a compatible dimmer. If not using 0-10V dimming, cap off the purple and gray wires.
- 11 Neatly place the all wires and wire nut into the junction box, place the canopy onto the mounting plate, and secure it in place by screwing the collar nut tightly onto the screw collar on the mounting plate.
- 12 Insert the reflector into the fixture and secure it place by screwing the diffuser onto the fixture. Make sure that the diffuser is installed correctly before releasing. **Do not over tighten.**